

## JINSP® RS2600 – The Compact Powerhouse for Gas Analysis

Our Product Introduction

for more products please visit us on [spectralanalyser.com](http://spectralanalyser.com)

### Basic Information

- Place of Origin: CHINA
- Brand Name: JINSP
- Certification: CE ISO9001
- Model Number: RS2600
- Minimum Order Quantity: 1
- Price: Negotiable
- Packaging Details: International Shipping Package
- Delivery Time: 90-120 working days
- Payment Terms: T/T, Western Union
- Supply Ability: 100 Unit 90-120 days




### Product Specification

- Model Name: RS2600 Multi-gas Analyzer
- Laser Excitation Wavelength:  $532 \pm 0.5\text{nm}$
- Spectral Coverage:  $200 \sim 4200 \text{ Cm}^{-1}$
- Analysis Time: 2 Seconds
- Detection Limit: Ppm Level
- Measurement Time: Real-time
- Highlight: **RS2600 Raman gas analyzer with 532nm laser , multi-gas analyzer for real-time detection , Raman gas analyzer with warranty**



### More Images

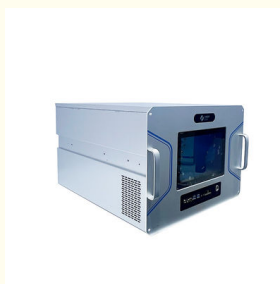

## Product Description

### JINSP® RS2600 – The Compact Powerhouse for Gas Analysis

Small size, big capabilities! The RS2600 delivers lab-grade accuracy in a portable format (485mm × 350mm), detecting H<sub>2</sub>, CO, CH<sub>4</sub>, and exotic isotopologues (HT, DT) via Raman tech.

#### Standout Features:

Simultaneous multi-gas: No sequential sampling delays.  
Robust design: Thrives in harsh industrial settings.  
Future-proof: Detects virtually any gas (except nobles).

#### Perfect for:

Coal gasification: Monitor CO/CO<sub>2</sub> ratios.  
Semiconductors: Verify ultra-pure BF<sub>3</sub> or Cl<sub>2</sub>.

Resolution: ≤8 cm<sup>-1</sup>; Weight: Optimized for field use.


#### Technical Specifications:

Components	N <sub>2</sub> , H <sub>2</sub> , O <sub>2</sub> , CO, CO <sub>2</sub> , H <sub>2</sub> S, CmHn, etc.
Analysis time	2 seconds
Measurement uncertainty	≤0.2%
Laser excitation wavelength	532 ± 0.5 nm
Spectral coverage	200 ~ 4200 cm <sup>-1</sup>
Spectral resolution	≤8 cm <sup>-1</sup> at full spectral range
Air circuit interface	6 mm standard tube fitting (3 mm, 1/8", and 1/4" are optional)
Input voltage	100~240 VAC, 50~60 Hz
Sample gas temperature	-50 ~ 40 °C
Sample gas pressure	1.0 MPa
Unit dimensions	485 mm (Width) × 350 mm (Height) × 600 mm (Depth)
Weight	40 kg

**Application: 1. Monitoring of F<sub>2</sub>, N<sub>2</sub>, HF and other components in the fluorination process.**

#### Monitoring of F<sub>2</sub>, N<sub>2</sub>, HF and other components in the fluorination process

component	content
F <sub>2</sub>	2%
N <sub>2</sub>	79%
HF	0.2%
CO <sub>2</sub>	3%
CO	0.0%
O <sub>2</sub>	3%
CF <sub>4</sub>	10%

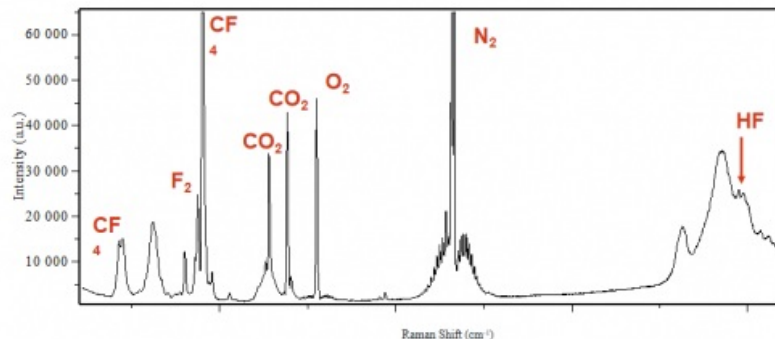


#### Application: 2. Quantitative analysis of different Elements in Petrochemical Natural Gas


Effective identification and quantification of various components in natural gas mixtures within 2 seconds, such as alkanes, alkenes, alkynes, etc.

#### Quantitative analysis of different Elements in Petrochemical Natural Gas

component	content
N <sub>2</sub>	26.66%
O <sub>2</sub>	6.36%
CO <sub>2</sub>	1.13%
CH <sub>4</sub>	65.26%
C <sub>2</sub> H <sub>6</sub>	0.54%
C <sub>3</sub> H <sub>8</sub>	170 ppm
n-C <sub>4</sub> H <sub>10</sub>	160 ppm
i-C <sub>4</sub> H <sub>10</sub>	160 ppm

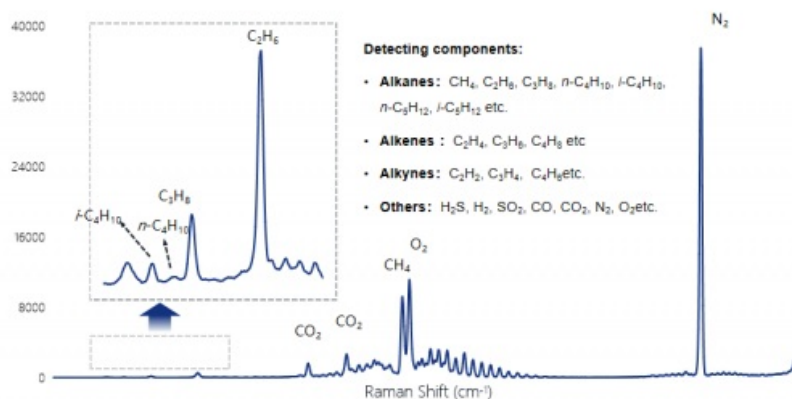


## Quantitative analysis of different Elements in Petrochemical Natural Gas

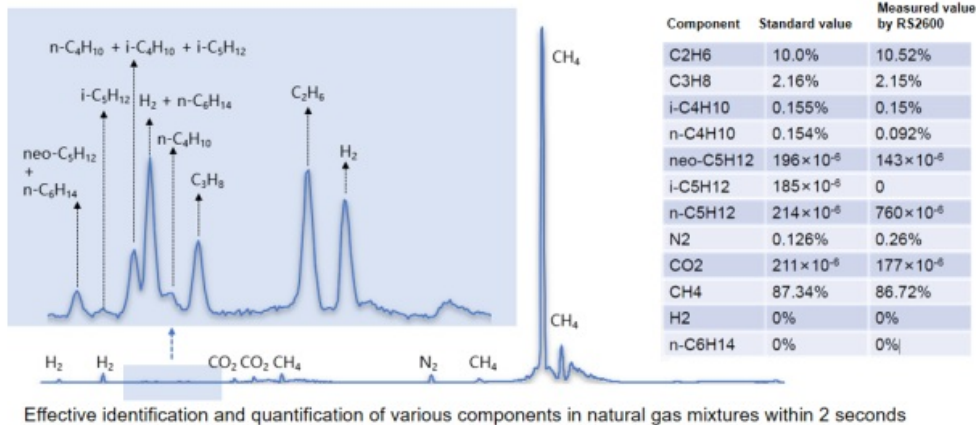


**Application: 3. Detection of components in reaction and emitted gases of fluorine materials, such as reactant gases, common gases, fluinated gases.**

## Detection of components in reaction and emitted gases of fluorine materials

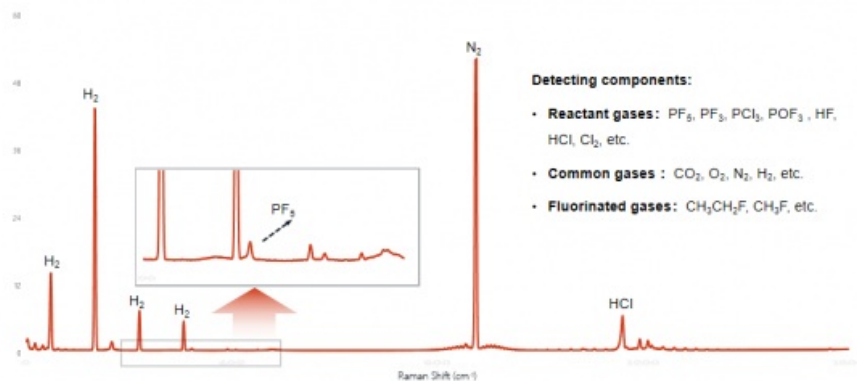

**Application: 4. Detection of impurity gases and electronic special gases.**


## Detection of Impurity Gases in Electronic Special Gases

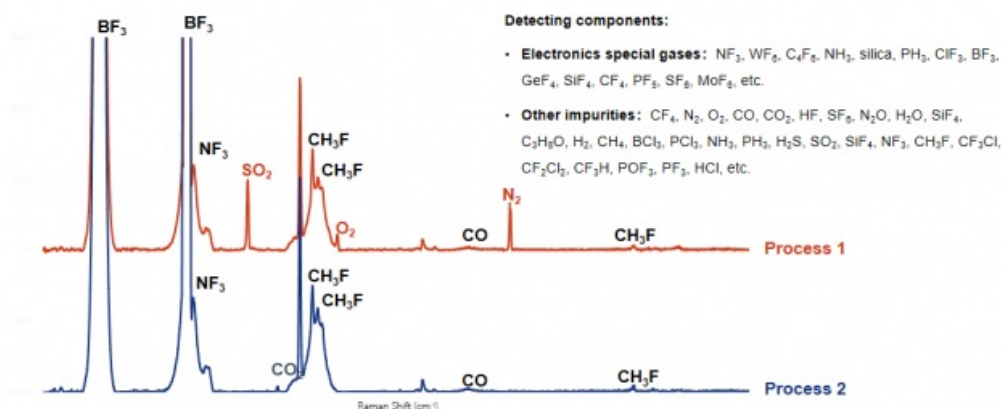

### Gas Analyzer Features:

Unlock the power of advanced spectral analysis with our cutting-edge quantitative modeling and chemometric techniques. By integrating multiple standard curves, we establish precise correlations between spectral signals and component concentrations, enabling highly accurate multi-component analysis—even in complex samples.

What sets us apart? Unmatched stability. Fluctuations in gas pressure or testing conditions won't compromise your results. Our robust method delivers consistent, reliable data, empowering your research and industrial applications with confidence. Elevate your analytics—where science meets reliability.

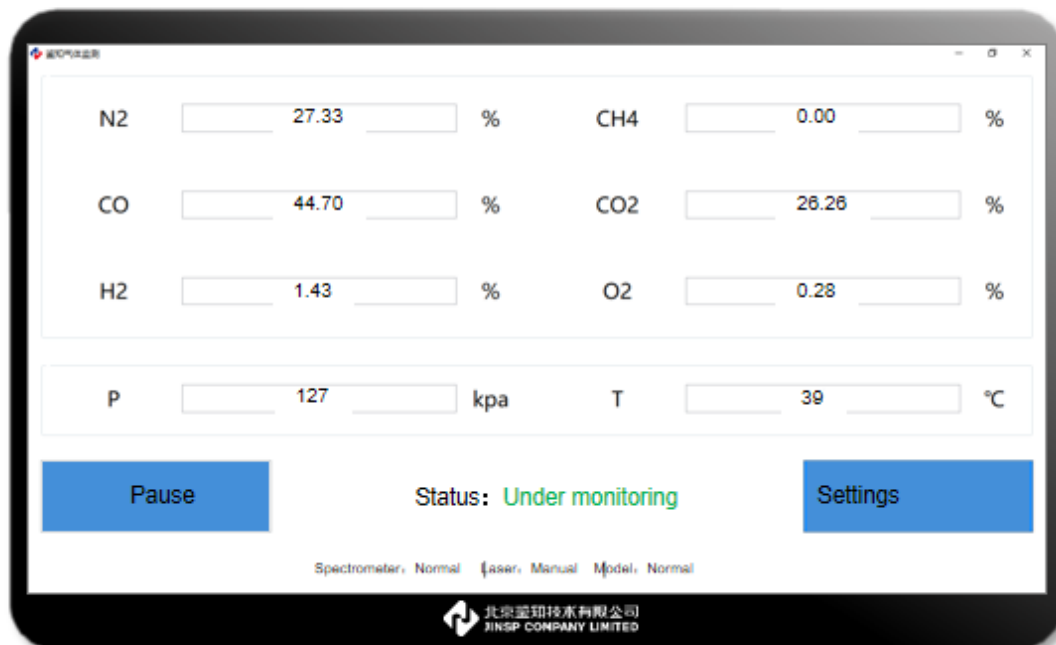

### Company Introduction:

JINSP Company Limited, abbreviated as "JINSP", is a professional supplier with over 17 years of experience in spectral detection technology products, including Raman, FT-IR, LIBS technologies, etc. After 17 years of technology accumulation, the company's core key technologies have reached the international leading position at the level, and the cumulative number of patent applications exceeded 200.

JINSP offers over twenty spectroscopic products across various fields, including pharmaceutical and chemical industries, public security, and customs. Products are available nationwide and are exported to over 30 countries, with cumulative sales exceeding 3,000 units.

Benefit from 30+ R&D engineers, including 4 Ph.D., JINSP is deeply rooted in the field of personalized product customization, and is committed to meeting the diverse and unique needs of customers with excellent professional technology and innovative design capabilities.

# Company Profile





# Exhibition



# Certifications



## FAQ:

Q: This is the first time I use, is it easy to operate?

A: We will send you manual and guide video in English, it can teach you how to operate the spectrometer. Also our technicians will offer professional technical operation meetings.

Q: Can you offer a operation training?

A: Your technicians can come to our factory for a training. Jinsp technical engineers can go to your place for local support. ( installation, training, debugging, maintenance )

Q: How to receive a best price in the shortest time?

A: When you send us an inquiry, please kindly offer details with wavelength, detector, effective pixels, focal length and so on. We will send you quotation with details soon to your email.

Q: Do you have MOQ requirement of each order?

A: No, we support order for even 1pc order.

Q: What is the product warranty?

A: All product has 1 year warranty, support extending warranty period with extra cost. Please contact with our sales person.



JINSP

JINSP Company Ltd.



8618620854039



phoebeyu@jinsptech.com



spectralanalyser.com

21st Floor, Building D, Tsinghua Tongfang Science and Technology Plaza, Haidian District, Beijing China