

Four Channels 785nm Laser Raman Spectrometer Wide Spectral Range

Our Product Introduction

for more products please visit us on spectralanalyser.com

Basic Information

- Place of Origin: CHINA
- Brand Name: JINSP
- Certification: CE ISO9001
- Model Number: RS2000APAT-4
- Minimum Order Quantity: 1
- Price: Negotiable
- Packaging Details: Customized Packaging
- Delivery Time: 90-120 working days
- Payment Terms: TT
- Supply Ability: 20 PCS/90-120 days



Product Specification

- Laser Wavelength: 785nm
- Wavelength Accuracy: 0.2nm
- Wavelength Stability: 0.01nm
- Power Supply: 900 W (Max) 500 W (Typical Running)
- Number Of Detection Channels: Four-channel Switching Detection
- Explosion Protection Rating (Main Unit): Ex Db Eb Ib Pzc C T4 Gc / Ex Ib Pzc Tb C
- Detection Accuracy: 0.5%
- Operating Temperature: -20 ~ 50
- Highlight: **Four Channels 785nm laser raman spectrometer**



laser raman spectrometer Wide Spectral Range,
Four Channels raman spectrometer detector

Product Description


785nm Laser Four Channel Wide Spectral Range Industrial Process Online Raman Spectrometer

Product Description:

In the realm of chemical, pharmaceutical, and materials engineering, the production processes necessitate a constant and vigilant analysis and monitoring of the various components involved. JINSP emerges as a pivotal player by offering on-site, online monitoring solutions tailored specifically for production environments. These innovative solutions facilitate in-situ, real-time, continuous, and rapid online monitoring of the diverse components present within reactions. This comprehensive and ongoing analysis plays a crucial role in determining the precise reaction endpoint, thereby ensuring that the process concludes at the optimal moment. Additionally, these advanced monitoring capabilities aid in the early detection of any abnormalities or deviations in the reaction, thus allowing for prompt corrective actions to be taken. This not only enhances the efficiency and safety of the production processes but also contributes to the overall improvement of product quality and consistency.

JINSP® RS2000APAT-4 online Raman analyzers provide in situ, real-time, and continuous composition analysis of chemical processes in the production environment.

RS2000APAT-4 analyzers are highly suitable for dangerous chemical processes including nitration, chlorination, fluorination, hydrogenation, diazotization, etc. Available with both continuous flow processes and batch processes. RS2000APAT-4 analyzers help increase process understanding and boost product quality.

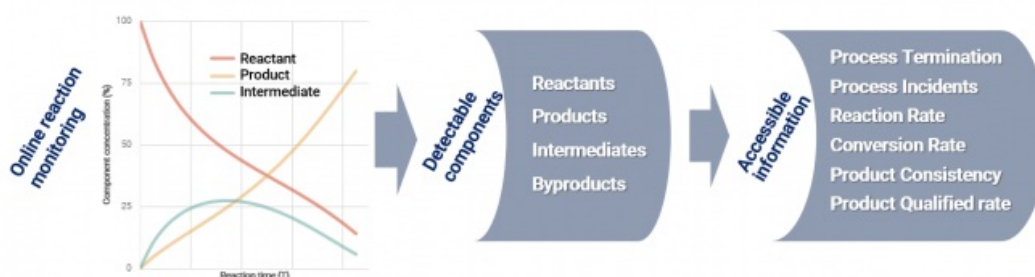

Advantages:

- In situ: no sampling required, avoiding contact with hazardous samples
- Real-time results: results provided within seconds
- Continuous monitoring: continuous monitoring throughout the entire process
- Intelligent: automatically provide analytical results
- Internet connectivity: timely feedback of results to the central control system

Benefits:

- Enhance production efficiency and capacity.
- Enable timely intervention to control the reaction process.
- Reduce product defect rates, and minimize losses.
- Provide alarm for abnormal reactions.
- Avoid dangerous on-site sampling.



Can withstand extreme reaction conditions such as strong acid, strong alkali, strong corrosiveness, high temperature, and high pressure



Real-time response in seconds, no need to wait, providing analysis results promptly.



No sampling or sample processing required, in-situ monitoring without interference to the reaction system.



Continuous monitoring to quickly determine the reaction endpoint and alert for any anomalies.

Technical Parameters:

Technical Parameter	Value
Product	Online Raman Analyzer
Measurement Type	Raman Spectrometer
Laser wavelength	785nm
Sample Type	Liquid
Number of detection channels	Four-channel switching detection
Chamber dimension	600 mm(width)× 400 mm(depth)× 900 mm(height)
Device dimension	900 mm(width)× 400 mm(depth)× 1300 mm(height)
Explosion Protection Rating (Main Unit)	Ex db eb ib pzc C T4 Gc / Ex ib pzc tb C T130°C Dc
Operating temperature	-20 ~ +50
Thermostat	The three-level temperature control system design can operate stably for a long time in an environment of -20 ~ 50 , and is suitable for online monitoring environments in different factories
Connectivity	RS485 and RJ45 network ports provide Mod Bus protocol, can be adapted to many types of industrial control systems, and can feedback results to the control system.
Probe	One standard 5 m non-immersed fiber optic probe (PR100)

% Relative humidity	0~90%RH
Power supply	900 W (Max) 500 W (Typical running)
Pre-heating time	60 min

Applications:

Li-ion battery industry

Research on the synthesis process of bis(fluoro sulfonyl)amide

Biopharmaceutical industry

Quality Control in Biofermentation Engineering

Fine chemical industry

Research on the process of producing furfuryl alcohol by hydrogenation reaction of furfural

For example: Monitoring of Extreme Conditions in Chemical Reactions/Biological Processes

Under extreme conditions such as strong acids or bases, high temperatures and pressures, strong corrosiveness, and highly toxic reactions, conventional analytical methods face challenges in sampling, and analytical instruments may be unable to withstand the reactivity of samples. In such scenarios, online monitoring optical probes, designed specifically for compatibility with extreme reaction environments, stand as the unique solution.

Typical Users: Production personnel involved in extreme conditions chemical reactions from new materials enterprises, chemical companies, and research institutions.




Usage models:

The RS2000APAT-4 can be used in two ways in large-scale production.

The first way is to use an industrial immersion long probe to go deep below the liquid surface of the reaction system to monitor the reaction components, which is more suitable for kettle-type batch reactors;

The second way is to use the flow cell to bypass the connected probe for online monitoring, which is more suitable for continuous flow reactors and other types of reaction vessels.

Application Scenarios

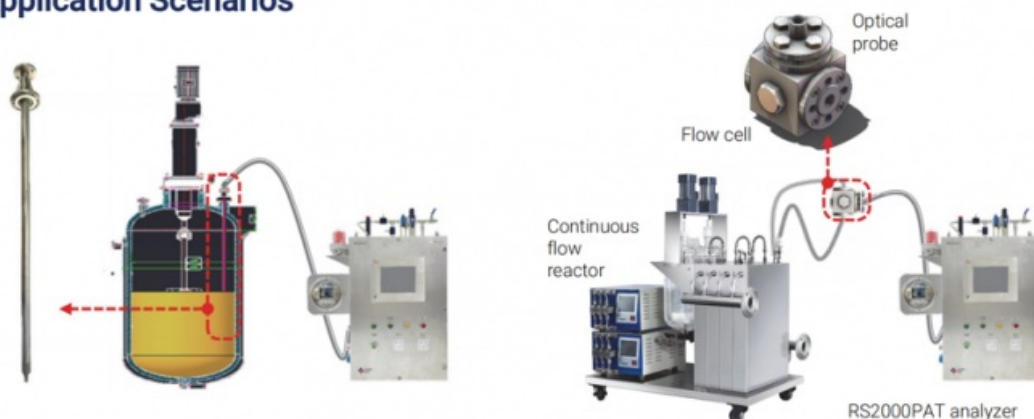

FAQ:

Q1: This is the first time I use it, is it easy to operate?

A1: We will send you a manual and guide video in English, it can teach you how to operate the spectrometer. Also, our technicians will offer professional technical operation meetings.

Q2: Can you offer an operation training?

A2: Your technicians can come to our factory for training. Jinsp engineers can go to your place for local support (installation, training, debugging, maintenance).

Q3: How to receive the best price in the shortest time?

A3: When you send us an inquiry, please kindly offer details with wavelength, detector, effective pixels, focal length, and so on. We will send you a quotation with details soon to your email.

Q4: If the spectrometer has a problem in my place, what could I do?

A4: The spectrometer has a one-year warranty. If it breaks down, our technician will figure out what the problem maybe, according to the client's feedback. We can repair for free within one year warranty.

Q5: What about quality assurance?

A5: We have a quality inspection team. All goods will go through quality inspection before shipment. We can send you pictures for inspection.



JINSP

JINSP Company Ltd.



8618620854039



phoebeyu@jinsptech.com



spectralanalyser.com

21st Floor, Building D, Tsinghua Tongfang Science and Technology Plaza, Haidian District, Beijing China